



**Black Switch Cap  
Coloured Bezels**

**Large Dials**

**Black Small Dial  
Coloured Dial Rings**

**Order Codes**

|                                         |                  |
|-----------------------------------------|------------------|
| Black Push Button Dolly – Classic Style | DOZ-DSW30ACC-PBB |
| Green Push Button Bezel                 | DOZ-DSW30ACC-GB  |
| Orange Push Button Bezel                | DOZ-DSW30ACC-OB  |
| Blue Push Button Bezel                  | DOZ-DSW30ACC-BB  |
| Large White Dial with Clear Ring        | DOZ-DSW30ACC-LDW |
| Large Black Dial with Clear Ring        | DOZ-DSW30ACC-LDB |
| Large Green Rotary Grip Ring            | DOZ-DSW30ACC-GRL |
| Large Orange Rotary Grip Ring           | DOZ-DSW30ACC-ORL |
| Large Blue Rotary Grip Ring             | DOZ-DSW30ACC-BRL |
| Small Black Dial with Clear Ring        | DOZ-DSW30ACC-SDB |
| Small Green Rotary Grip Ring            | DOZ-DSW30ACC-GRS |
| Small Orange Rotary Grip Ring           | DOZ-DSW30ACC-ORS |
| Small Blue Rotary Grip Ring             | DOZ-DSW30ACC-BRS |

**Overview**

Accessories for the DOZ-DSW30M and DOZ-DSW20S ranges of Modular DALI switches.

Accessories allow:

- changing grip ring colours for rotary dials;
- changing indication colours for push buttons;
- large rotary dials in black and white;
- black switch dolly for push button switches (Classic Style);
- small black dial.

**Features**

Easy switch out / exchange of the standard white / clear / small dial options, allowing use of colour options if desired.

**Typical Applications**

Commercial & Industrial buildings, Education Facilities, Aged care facilities, Hotels, Residential buildings.

**Installation**
*Black push button switch dolly*

The existing white dolly folds up and can be lifted out. Reverse the procedure to insert the black accessory.

*Black and Large dials*

Simply pull off the existing dial and push on the replacement dial.

*Push button switch bezels*

A bezel removal tool can be supplied supporting quick and easy changeover of the bezel:



Use the Bezel and Dial Remove Tool to engage with the slot on the side of the push button housing, as shown above.



Push the tool into the slot until the clear bezel around the button releases from the housing. Repeat the process on the other side of the housing.




Lifted the clear bezel to remove from the housing.




Place the coloured bezel into the housing, ensuring the four bezel legs line up with the retaining holes in the housing. Push the bezel until it clicks into place.

**Installation (contd)**
*Dial Rings*

Carefully remove the existing dial ring. To fit a replacement:

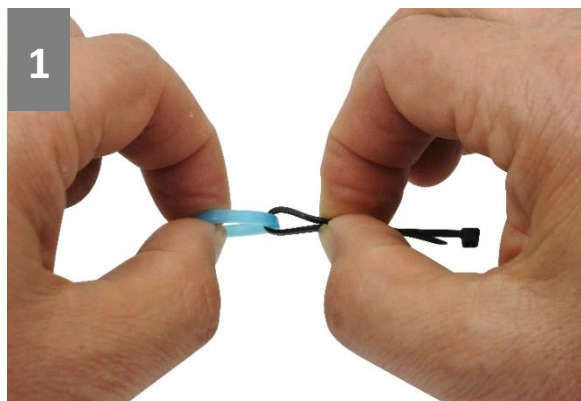


Loop a cable tie through the coloured Dial Ring and firmly hold the cable tie between thumb and forefinger.

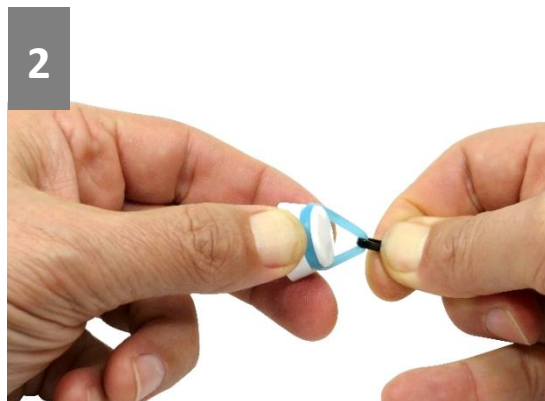


Loop the Dial Ring over the Dial and push it into the groove on one side.

**NOTE:** the Dial Ring has a bevelled edge and the smaller diameter should face towards the top of the Dial.

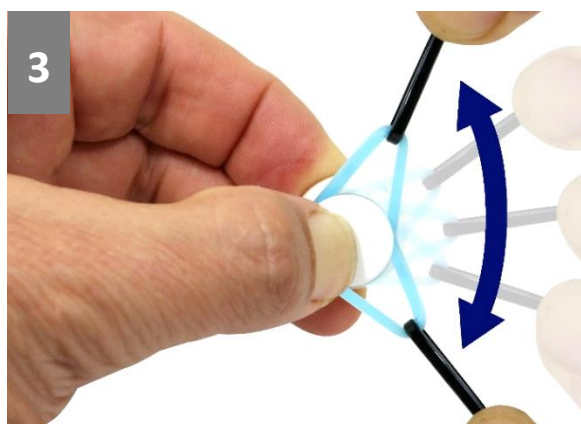


Using the cable tie, stretch the Dial Ring and rotate it 90 degrees through the groove a few times to ensure it is fully engaged in the groove.

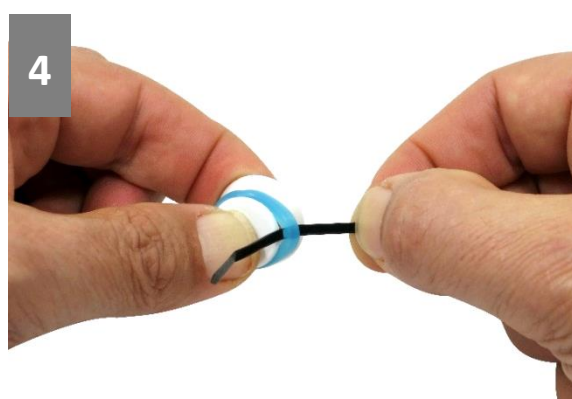

Release and remove the cable tie.

Run a thumb around the face of the Dial Ring so that it sits properly in the groove

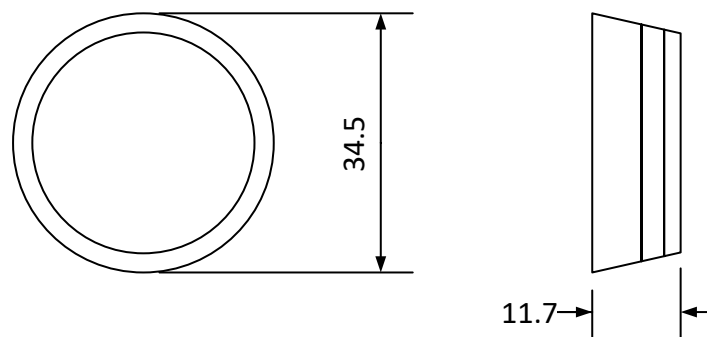**Dimensions for Large Dials****Contact Information****More Solutions Ltd**

Registered in England, UK  
(0456 0902)

[www.more-lighting.co.uk](http://www.more-lighting.co.uk)

+44 344 251 1450

[sales@more-solutions.co.uk](mailto:sales@more-solutions.co.uk)

**Manufacturer Information****Ozuno Trading Pty Ltd**

ABN: 96 621 194 483

[www.ozuno.com](http://www.ozuno.com)

+61 8 8362 7584

[sales@ozuno.com](mailto:sales@ozuno.com)

This product includes a **TWO-YEAR WARRANTY** against manufacturing defects.

**RAPIX** is a trademark of Ozuno Holdings Pty Ltd.

**DALI** is a trademark of the Digital Illumination Interface Alliance.

**COPYRIGHT** © 2022-2024 This document is copyright by Ozuno Holdings Pty Ltd. Except as permitted under relevant law, no part of this data sheet may be reproduced by any process without written permission of and acknowledgement to Ozuno.

**DISCLAIMER.** Ozuno Holdings Pty Ltd (Ozuno) reserves the right to alter the specifications, designs or other features of any items and to discontinue any items at any time without notice and without liability. While every effort is made to ensure that all information in this Data Sheet is correct, no warranty of accuracy is given and Ozuno shall not be liable for any error.

**TRADEMARKS.** The identified trademarks and copyrights are the property of Ozuno Holdings Pty Ltd unless otherwise noted.

13-20-506-002-02 December 2024